

1. IMPORTANT SAFEGUARDS AND WARNINGS

Prior to installation and use of this product, the following WARNINGS should be observed.

- 1) All the safety and operating instructions should be read before the appliance is operated.
- 2) Do not use this unit near water or watery places.
- 3) Operate this unit from the type of power source indicated on the marking label or manual. When the voltage goes beyond the limited, please do not open the unit.
- 4) Don't clean it with the punchy detergent. Please use the soft cleaner, and only clean the outer.



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DONOT REMOVE COVER(OR BACK). NO USER SERVICEABLEPARTS INSIDE.

Please thoroughly familiarize yourself with the information in this manual prior to installation and operation.

DESCRIPTION


It can control output decoders, integrated camera, speed dome, or integrated PT unit. It can also be used in our DVR system.

Technical Parameter

1. Baud Rate: 2400 Bit/S, 4800Bit/S, or 9600Bit/S.
2. Communication: RS-485
3. Power supply: 9VDC
4. Communication distance: max 1200m
5. Can control Max 32 speed domes.
6. Max Distance 1.2km


4. Names and Functions of Each Parts

Rear Panel

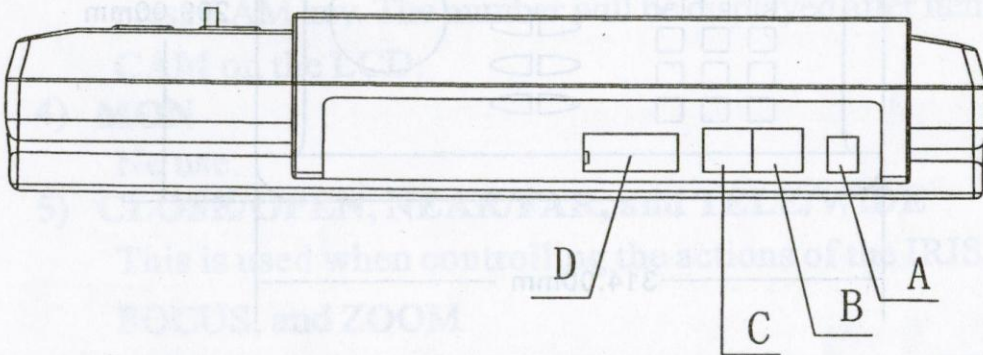

- A. Input power: Connect with DC9V power supply.
- B. RS485-1: Connect with speed dome, decoder or receiver
- C. RS485-2: No use.
- D. RS232 connector: No use.

Front Panel

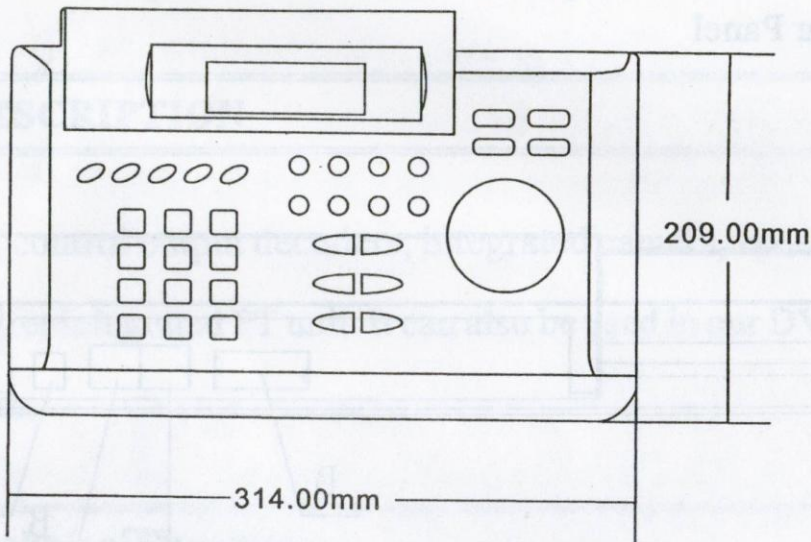

1) LCD DISPLAY

This displays the current address, protocol and baud rate.

2) 0~9

They are used to set up the camera address, PRESET No., and to modify

the keyboard parameters.

When SHIFT button is in effect, it will be light. 2 to 8 to 4 to 6 can also be used to move the PT unit UP, DOWN, LEFT and RIGHT.

3) CAM

Enter the address (0-255) by the number key then press CAM key. The number will be displayed after item CAM on the LCD.

4) MON

No use.

5) CLOSE/OPEN, NEAR/FAR, and TELE/WIDE

This is used when controlling the actions of the IRIS, FOCUS, and ZOOM

of the zoom lens connected to the speed dome or PT unit. Under camera mode, turn the menu by pressing

WIDE and **TELE**, adjust the parameter

value by pressing **FAR**, and exit the adjusting by pressing **NEAR**

6) JOYSTICK

It is 2D or 3D, and used to move the speed dome or PT unit on pan or tilt direction. The moving speed

increases as the offset. Turning the knob on the 3D joystick can control the camera **TELE/WIDE**.

) **MENU**

Press key **MENU** to call the camera menu.

Exit the menu from the exit item of the camera menu (recommended) or press key **MENU** again. Turn the menu by pressing **WIDE** and **TELE**, adjust the parameter value by pressing **FAR**, and exit the adjusting by pressing **NEAR**

) **Tour**

Press key **Tour**, it gets turned on, and tour begins.

Press key **Tour** again, it gets turned off, and tour stops.

) **SCAN.** (360° pan auto scan)

Press key **SCAN**, it gets turned on, and auto scan begins.

Press key **SCAN** again, it gets turned off, and auto scan stops.

10) PATTERN

No use

11) SHIFT

Press key **SHIFT**, it gets turned on, and **SHIFT** is in effect.

Press key **SHIFT** again, it gets turned off, and **SHIFT** is off no effect.

12) BEFORE

Go to previous Preset

13) NEXT

Go to next Preset

14) CALL

This is used when searching for the **CALL** position set up in the speed dome or receiver. Input the Preset No. in the Number area, and press key **CALL** to call it. If succeed, the number input area will reset automatically.

PRESET NO. (1-32) (34-66)

15) Enter

No use.

6) CLEAR

Press key **CLEAR**, the Number input area will reset

7) PRESET

I. This is used to set up the Presets. Input the Preset No. in the Number area, and press key **PRESET** to set up the PRESET. If succeed, the number will be reset automatically.

PRESET NO. (1-32) (34-66)

II. Pressing this key for two seconds can delete the PRESET set up in the speed dome or receiver. Input the Preset No. in the Number area, and press key **PRESET** for seconds to delete the Preset. If succeed, the number input area will be reset automatically.

PRESET NO. (1-32) (34-66)

8) MUX-C

No use

19) PGM

Input 50, and then press key **PGM** to select Protocol P.

Input 44, and then press key **PGM** to select Protocol D.

Input 12, and then press key **PGM** to select Baud Rate to 1200.

Input 24, and then press key **PGM** to select Baud Rate to 2400.

Input 48, and then press key **PGM** to select Baud Rate to 4800.

Input 96, and then press key **PGM** to select Baud Rate to 9600.

If the above action can succeed, the number input area will reset automatically

20) AUX1—AUX4


No use.

KEY BOARD CONNECTION

Connect **O/R** with RS-485+A

Connect **S/L** with RS-485-B

Inner connection diagram

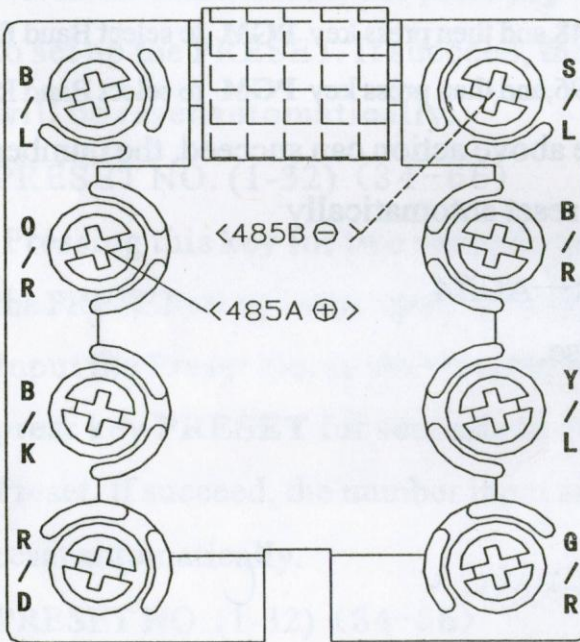

NOTE: There is a film on the LCD. Take it off before using.